



SAPCON INSTRUMENTS

40+ Years in Process Control Instrumentation



131 Palshikar Colony, Indore




0731-4757575



www.sapconinstruments.com

Introduction : Virtuous Cycle

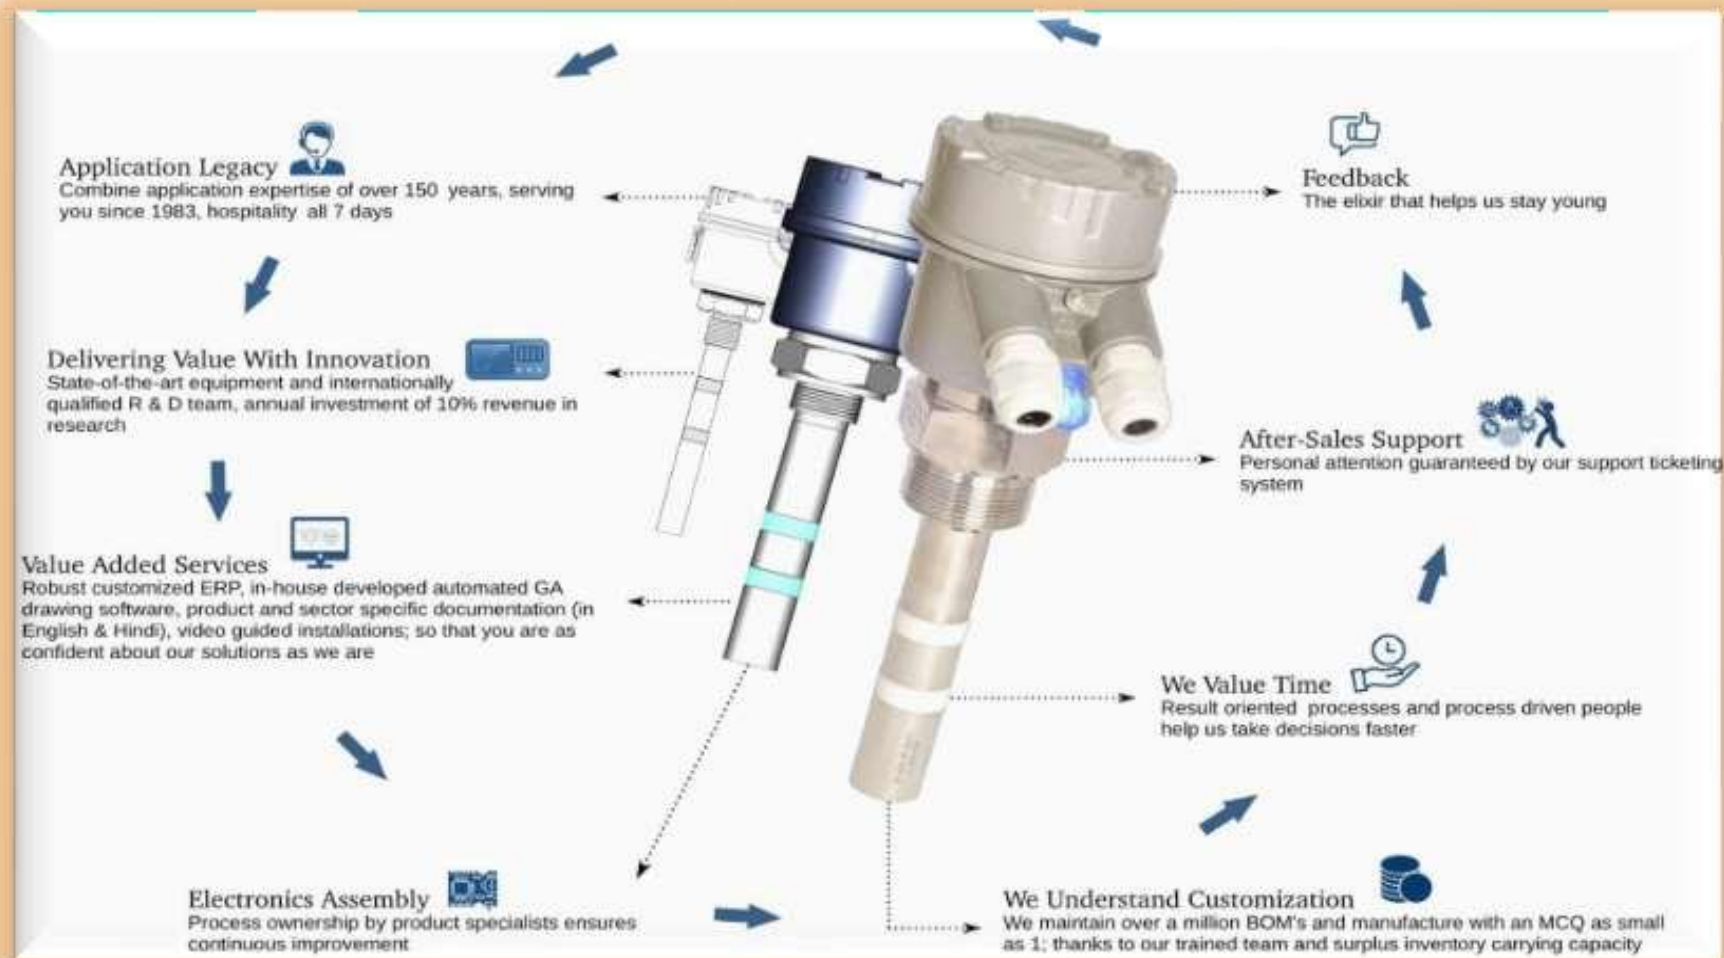



Rajendra R. Palshikar

CA, Institute of Chartered Accountant of India
Director Finance &Accounts



Ashwin R. Palshikar

MBA, S.P. Jain Institute of Management & Research
Director Business Development

Our Manufacturing Process



LEVEL SWITCHES

High and Low Level Detector
Overfill & Dry Run Detection
Available for Hazardous Area



LEVEL SENSORS

Continuous Monitoring
Accuracy in Process Automation
Reliable & Stable Operation



Delivering Value with Research & Development
10% of revenue invested annually in research to develop and upgrade level sensors and speed monitoring instruments.




Manufacturing Level Sensors
We maintain close to a 400K BOM's and manufacture level sensors with an MOQ as small as one.

Our Experience in Fields of Instrumentation

- 40+Years of experience in Instrumentation.
- 90,000+ Successful Installations.
- 8,000+ Valuable Clients.
- Export to 90+ Countries.
- Renowned brand in the process automation market.


General Work Flow

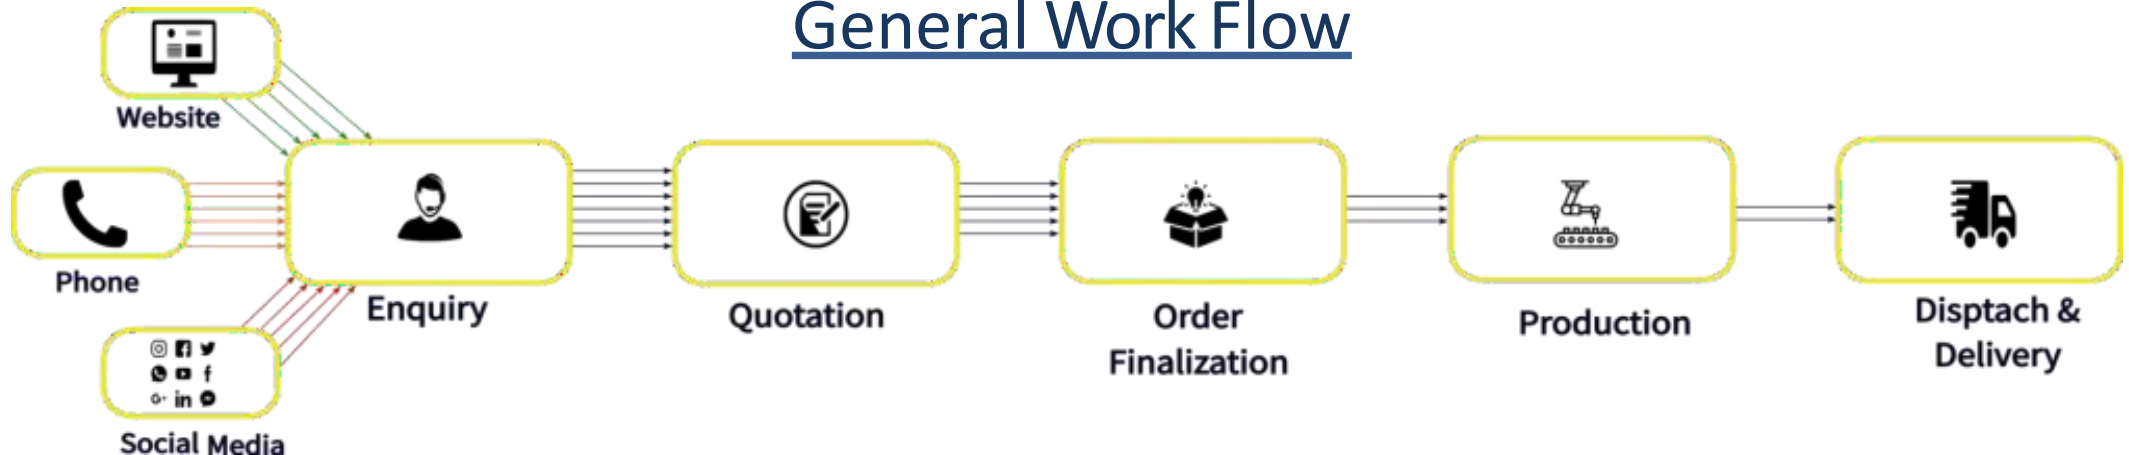

- CE/ISI/CCOE/PESO
- ISO 9001:2015
- ISO 14001:2015
- ISO 22000:2018
- ISO 45001:2018
- EHEDG Certified.



Our Major Clients of Pharma Industries

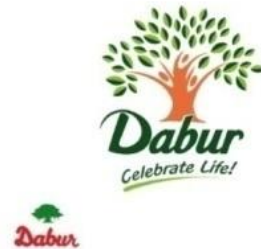

- Cipla Limited
- Lupin Pharmaceuticals Limited
- Mylan Pharmaceuticals Limited
- Ipca Pharmaceuticals Limited
- Symbiotec Pharmaceuticals Limited
- Sun Pharmaceuticals Ltd.
- Dr.Reddy's Laboratories Ltd.
- Cadila Healthcare Ltd. (Zydus)
- Hetero Labs limited
- Dabur India Limited

- A. Cipla Limited
- B. Dabur India Limited
- C. Jubilant Generics Limited
- D. Indo German Pharma Engineers

(A)

(B)

(C)

(D)

Order Copies From Our Pharma Clients

- A. Pharmalab India Pvt Ltd.
- B. Sun Pharmaceutical Industries Limited
- C. Symbiotec Pharmalab Ltd.
- D. Lupin Limited.
- E. Sierra Instrumentation & Controls

Vendor: Sapcon Instruments Pvt. Ltd. Head Office: Sierra Instrumentation & Controls. Purchase Order: SI-2014-01-01-001. Description: Sapcon make Capacitance type level switch as per below specification. Qty: 4. Unit Price: (Rs.). Total: (Rs.).

(E)

Purchase Order. To: SA84. SAPCON INSTRUMENT PVT. LTD. 131 PALSHIKAR COLONY INDORE. Order No: 2016040510. Order Dt: 2016-04-19. Tin Vat: 24660104655 D/G104/2013. Tin CST: 24660104655 D/G104/2013. ECC No: AADCP7969PM003. Delivery At: Sanket Vinayak Estate Sanket Vinayak Road, Santet, Gandhinagar, 307212, Gujarat.

SUN PHARMACEUTICAL INDUSTRIES LTD. PURCHASE ORDER. PO. No: 930647610. Date: 25.01.2023. FROM: SUN PHARMACEUTICAL INDUSTRIES LTD. DEWAS INDUSTRIAL AREA 3, A.B. ROAD DEWAS-475001, MADHYA PRADESH, INDIA. TO: SAPCON INSTRUMENTS PRIVATE LIMITED, 131, PALSHIKAR COLONY, INDORE-475001, MADHYA PRADESH, INDIA.

Amendment-1 (2012/14,16,56). PURCHASE ORDER. Symbiotec Pharmalab Pvt. Ltd. (Formerly known as Symbiotec Pharmalab Limited). PO No: SDCPC-7200001415. Date: 26.12.2014. Order No: 1.15-13528.00A/2014RP. Quotation No: 13.12.14. Page 1 of 2.

LUPIN LIMITED. PURCHASE ORDER. PO Number: 320602288. PO Date: 04-04-2019. Quotation No: 58807. Quotation Date: 01-Oct-2019. Description: Level Switch SLC CAP TYPE FOR INCL 300MM. Qty: 1.000 EA. Unit Price: 9.00. Total: 9.00.

(A)

(B)

(C)

(D)

Order Copies From Our Pharma Clients

- A. Cadila Healthcare Ltd.
- B. ACG Pharma Technologies Pvt Ltd.
- C. Nilsan-Nishotech Systems Pvt Ltd.
- D. Wacker Metroark Chemicals Pvt Ltd.
- E. Bright Pharma Engineering Pvt Ltd.

Bright Pharma Engineering Pvt.Ltd.
Factory Address:
Unit No.8/1 & 8/2, Building No.64, Shreevatsa Indl. Estate, Opp. Karnataka Process House,
Bhupada, Near to Bannur Road Pump, Vasai (E) - 401 208

PURCHASE ORDER

Vendor: M/s. Sapcon Instruments Private Limited
131, Palshikar Colony, Indore-452004 (M.P.), India.
Tel: 0731-247531, 247531/4-475375
Fax: 0731-2475475
Mobile: 0960777672
Email: mobil-desig@sapcon.in, sales@sapcon.in

Kind Attention: Mr. Moha Deo (0960777672)

Material Description: **Float Level Switch**
Type: Top Mounted Magnetic Level switch.
Model: STM-16-12 T8B-ON PGT-509
Process Connection: 1" BSP
Material of Construction: SS316 and SS
Type of switch: 1 nos. SPST reed switch contact reversible.
Reed switch preset at: 55mm from top.
Total Stem Length: 550
Switch rating: 100V A
Float: 28mm dia x 28mm long - 1 nos.
Maximum Switching Voltage: 250 VAC
Maximum Working Temperature: 120 Deg. C
Maximum Working Pressure: 7 kg/cm²
Cable Entry: PG7
Wire length: 3 meter.

Unit Price (Rs.) 3,000.00 Discount (%) NA Unit Net Price (Rs.) 3,000.00 Total Price (Rs.) 3,000.00

Reg. Office: A/78, New Empire Indl. Estate, Kondhwa Lane, J.B. Nagar, Aundh (E), Mumbai-79
Tel: 022-4696976/77, Fax: 022-4696978, Email: vijay@brighapharma.net & ramesh.pandey@brighapharma.net

(E)

Cadila Healthcare Ltd
Admin. Office : Zylova Towers, Sheikh Ganga Road, Sector-5, Connaught Place, New Delhi-110021.
CN : LK43303/1586PL/CD25878

Vendor : 203739
SAPCON INSTRUMENTS PVT. LTD.
131, PALSHIKAR COLONY,
INDORE

Invoice to Cadila Healthcare Ltd
Consigee / Delivery Address
CADILA HEALTHCARE LIMITED
SURVEY 417, 418 & 420, SARNOJE BAVALA
HOSHRAY SA
VILLAGE MORAYA TAL. SANAND NEAR
MODERN DENIM PLANT,
AHMEDABAD-380010
Tel: 0271250331 Fax:
E-mail:
Mobile: 9754281085

PO Number : 4180027143
PO Date : 05-Apr-2018
PO Type : CHL - MORAYA
Contact Detail
Purchase Rep : Project & CAPEX
Phone Number :
E-mail :

Payment Terms : AGAINST PROFORMA INVOICE
Delivery Terms : Free on Road UPTO OUR SITE(PNAXIN)
Currency : INR

Material Code 80422011
Material Desc: FLP LEVEL SENSOR 833MM LONG FOR SOLVENT DISPENSING AREA PNF-I
Delivery Schedule
QTY Delivery Date at Plant
4,000 30-Mar-2018

Sub Total

For Cadila Healthcare Ltd
Authorized Signatory

(A)

ACG Pharma Technologies Pvt. Ltd.
GAT No: 1109 (Part) No. 1119 (part) and No.1100 (part)
Tal: Mandala Dist. Satara, Maharashtra, ShreeWadi - 412801
Phone No - +91 02169 30450001
Fax:
Email:
Web:

PURCHASE ORDER
CN : U02051M1996PTC104558
GST No: 27AAAC29380G/120
PAN : AAAC29380G
Format No:
Revision No:

Vendor Code SAP008
PO No 7110194531
PO Date 10.07.2023
Supplier Qtn Ref :
Reference :
Print Date 11.07.2023
Slav Order No :
Project No :
PO Division :

Material Code 10
Material Desc BELESWTH2032
Level Switch
Material of Construction PGT-585 SMTR
Old Mat Code :
Del Date 09.08.2023
HSN 9026 10 20
Qty 1 NO
Basic Price 0.00
Basic Price IN: Central GST @ 90.00%
IN STATE GST @ 90.00%

Item Text
Mat. Text

Line Item Total
Total Taxable Value
Total Tax Value
Total PO Value INR

Taxable Value :
Tax Value :
Total Value :

Text :
Note :

For ACG Pharma Technologies Pvt. Ltd.
(This is a system generated PO and does NOT require signature)
Authorized Signatory

(B)

WACKER (SILICONES)
Docusign Envelope ID: DC77E9B-A834-45FE-45E7-4F79D718304

Wacker Metroark Chemicals Pvt Ltd
D.H. Road, Chandri, 24 Parganas (S)
West Bengal 743503, India
Phone : +91-33-24072100
www.wacker.com

Purchase order
PO number: 9160608758-3671-613/29.12.2022
Invoice number: 9160608758-3671-613/29.12.2022
Prmoay Mondal
Tel: +91 33-24072249
Prmoay. Mondal@wacker.com

Wacker Metroark Chemicals Pvt. Ltd.
D.H. Road, Chandri, 24 Parganas (S)
Batalika, West Bengal Region 19
743503 India
Place of Supply: West Bengal Region 19

Delivery date 126.01.2023

Deliv. terms EXW INDORE
Paymt. Terms within 14 days Due net

Please send your invoices to
Wacker Metroark Chemicals Pvt Ltd
D.H. Road, Chandri, 24 Parganas (S)
West Bengal - 743503, India

Please note, the number of our Purchase Order as well as the respective line item number has to be stated on the shipping documents.

CC: 130000 (OTHER PROD. OVERHEAD)
PR REF: EMAIL FROM MR. SATYEN SALGAR, DATED - 14.12.2022.
QTN REF: SAP LIS-116655-1, DATED - 12.12.2022.

Item Material Description Price per unit Net value
00010 Level Switch_SILIXIR-1-PP2C-PCMSD-D-0-PA2 2.00 piece

(C)

PURCHASE ORDER

From: Nilsan-Nishotech Systems Pvt Ltd.
131, Palshikar Colony, Indore
TTC Industrial Area
Thane, Belpur Road
Khairane-MH-400705
IN
Contact Ph. No. : +91-22-41515151

P.O.NO. N14PU01491-1
To: Sapcon Instruments Pvt Ltd
131, Palshikar Colony, Indore
Indore
MP-452004
IN
Contact Person : Mr. Aditya Bhokardankar
Contact Ph. NO. : +91 731 4085751

Date: 21.02.2015

CST TIN : 2789027892 WEF 01.04.06
VAT TIN : 2789027892 WEF 01.04.06
CIN NO : U74999MH1999PTC099783

Your Ref : SAP: LIS-24035.00 2014RP dt: 20/2
OUR REF : P14128 /

Payment Terms : Net 15 days
Delivery Terms : 24.02.2015

Delivery Mode :

Del At Khairane
Item Code RLSPTAAAN
Item Desc. Level Switch
Probe Length: 1950mm
Model: SL-922
End Connection: DN 80 ANSI B16.5
150# Flange

Unit Nos
Qty 2.00
Unit Price 2.00
Amount

Note: MATERIAL TO BE SENT DIRECTLY TO SITE.
SHAMEERPET-500078
- Kindly refer attached datasheet for complete specification & requirement of certificate
- We require all certificates & invoice alongwith material

Special Instruction :
1. Please return the copy of this order duly signed by you in token of your Acceptance
2. All Documents must bear the purchase order reference
3. Goods to confirm to the approved samples and / or buyer's specification
4. RRLR & Bills in duplicate to be sent to purchase department at above address
5. Please mention gross weight/ net weight in challan & invoice
6. Invoices for Payment shall be duplicate and must be accompanied by copy
7. Freight is on Nilsan Nishotech Systems Pvt Ltd scope
Other Terms and Conditions : 1. Other terms & condition as per annexure if applicable
2. Technical specifications and scope of supply as per annexure
3. Excise duty shall be paid extra on bought out items and prevailing at the time of Dispatch
4. Goods should accompany invoice and all relevant certificate
5. Material to be sent by approved transporter having PUC and license
6. Packing should be done with Bio-degradable material.

Delivery address W-199 E, MIDC, Khairane,
TTC Industrial Area,
Thane, Belpur Road
Khairane-MH-400705
IN

GRAND TOTAL :

Format No: F. PU. 01, REV 01, 1/4/10
Page : 1 of 2

(D)

Pharmaceutical industries & its Application

The pharmaceutical industry covers the manufacturing process of medicinal drugs like syrup, tablets, capsules, etc. and the process involves accurate measurement at various stages to finish the operation which associate with strict hygienic environment.

Applications

Storage Tank



Liquid - [Elixir-T-Uni](#), one of the vibrating fork level sensor with hygienic finish ($Ra < 0.8\mu$) is an ideal solution.

Solid - Free-flowing material can be easily detected by [Vital](#).

Dosing Tank



Liquid - Syrup is viscous and creates coating which can be detected by [Coat-Endure](#), which has build-up immunity.

Solid - Level detection with [Vital](#) would be suggested in solid material as it is calibration-free.

Water For Injection Tank



Water purification method is used to eliminate impurities & prohibits micro-bacterial growth. This operation performs with Level instruments. [SLW](#) and [Elixir-T Uni](#) type level sensors are proven solutions in the purification process.

Granulation



This process includes grinding of material into finer pellets if inlet is solid and combining powder particles together by compressing to form granules. For solid applications, [SLC](#) will be helpful.

Tablet Packaging



Liquid - [Elixir](#) perfectly caters level sensing for liquid material and has compact size.

Solid - [Vital](#) has fast switching feature which makes it a good choice for packaging.

Our Specialized Products For Pharma Industries

- Tuning Fork Type Level Switch (Elixir)
- Compact Tuning Fork Type Level Switch (Elixir T-Uni)
- Vibrating Fork Type Level Switch (Vital)
- Conductivity Type Level Switch (SLW)
- RF Admittance Type Level Switch (Coat Endure, SLA)
- Capacitance Based Level Switch and Transmitter (SLC, MPILC)
- Rotating Paddle Type Level Switch (Orbit Paddle)


Tuning Fork Type Level Switch: Elixir

Working Principle :

A compact liquid level sensor based on the tuning fork principle is a cost-effective solution with hygienic-pipe fittings & useful for all kinds of liquids. This tuning fork level sensor is used for point level detection in storage tanks, silos and pipelines to avoid overflow & dry run conditions.

Properties :

- Universal Power Supply: 18 - 55V DC & 90 - 265V AC
- Application Temperature Range : up to 200° C
- Output: 8.2V Namur, SPDT & DPDT Relay, AS-I
- Process Connection: Threads, Flanges and Tri-Clamp (Hygienic Connection)
- ECTFE coated, polished & hygienic fork
- Extendable probe length from 68 to 3000 mm
- Certifications: Flame Proof Housing IIC, PESO, BIS, CCOE, EIL, Ex-ia
- Fork Level Sensor **with Namur Output** Intrinsically Safe design Ex-ia Certified New

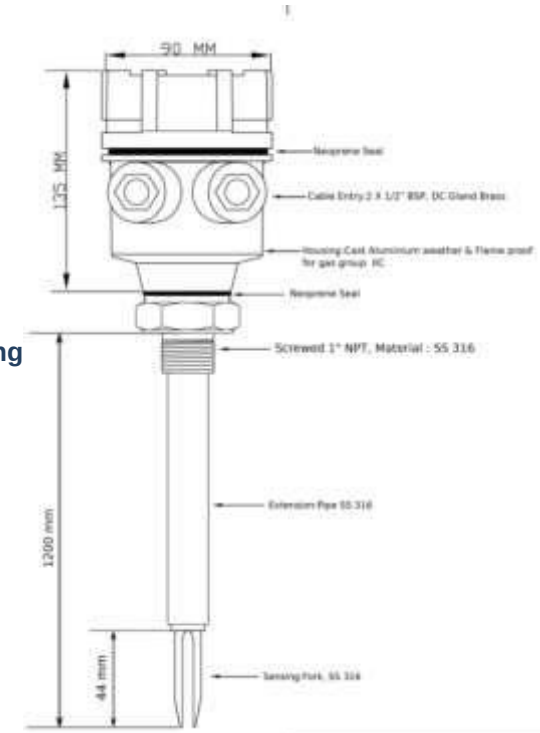

Advantages:

1. Technical Advantage

- Tines are resilient to practical with conditions
- IR communication for diagnosis, trouble shoot and configuration
- LED for switch indication (Device safe visual Operations)
- Fast Switching.

2. Commercial Advantage

- An obvious price benefit over competitor
- Reduced delivery in cycle time of receiving the product
- Better after sales support
- Strong Presence in the market
- extended guarantee period

• Elixir

• GA Drawing

Tuning Fork Type Level Switch: Elixir-T Uni

Working Principle :


A compact fork type level switch based on a tuning fork working principle with a hygienic connection is useful for all types of liquids. This kind of fork is suitable for liquid level measurement techniques in process vessels, storage tanks, silos, hoppers, and pipelines to prevent overflow & dry run conditions.

Properties :

- Power Supply :18-30 V DC
- Output: PNP, AN-I bus Interface
- Temp Range : Up to 150°C
- Certified By EL Class I by EHEDG
- Enclosure : IP68 Weatherproof
- Process Connection : Threads , Tri-Clamp (Hygienic Connection)
- Wetted Parts: SS316, SS316L with hygienic finish (Ra<0.8μ)



• Elixir T-Uni

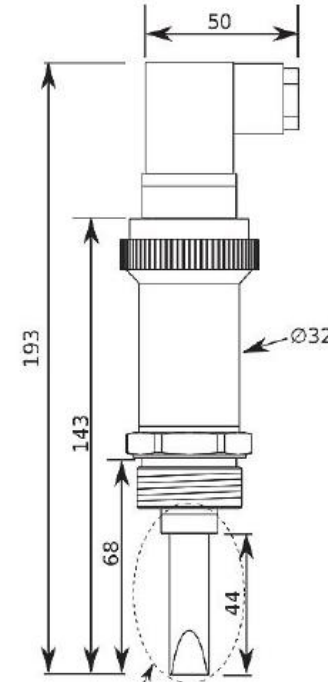

• GA Drawing

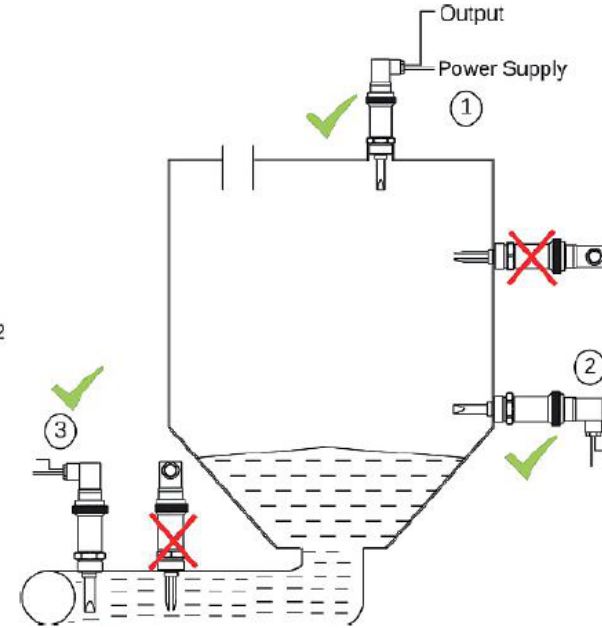


Figure 3: Installation Diagram

Advantages:

- Level detection of soap & detergent in the manufacturing process is a challenging task as it deals with sticky & foaming materials but with the help of tuning fork level sensor **Elixir T-uni** it become easy.
- Ignores foam build-up on tuning fork. Useful in dairy applications where foam build up is excessive.
- Suitable for applications involving bubbles, steam and material flow at 150°C.
- Industry standard valve plug-in connection, easy to install and ready to use.
- A simple diagnostic tool to check output connections and start diagnostics.

RF Admittance Type Level Switch: Coat Endure

Working Principle :

A compact admittance type level switch based on RF admittance working principle is specially design to detect sticky solids and liquids. This level measuring device is suitable for conductive as well as non-conductive application media.


Properties :

- Universal Power Supply: 18-55V DC & 90-265V AC
- Application Temperature Range : up to 250° C
- Outputs: DPDT Relay, Open Collector PNP Output
- Process Connection: Threads and Flanges
- Wetted Parts: PTFE, SS 304 &, SS 316
- Probe length: 65 mm to 1500 mm
- Certifications : Flame Proof IIC & IP68 Housing
- RF Level Limit Switch **with Namur Output** Intrinsically Safe design Ex-ia Certified **New**


Advantages :

1. Technical Advantage

- Foam, No-Foam Detection.
- Suitable for Conductive and Non Conductive Application.
- External LED Indication Available.
- Fast Switching.

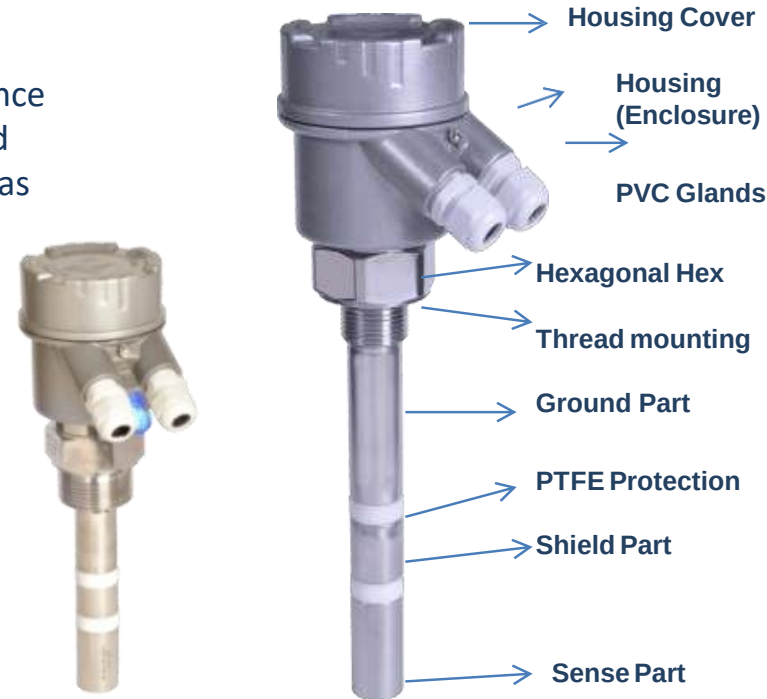

• Coat Endure

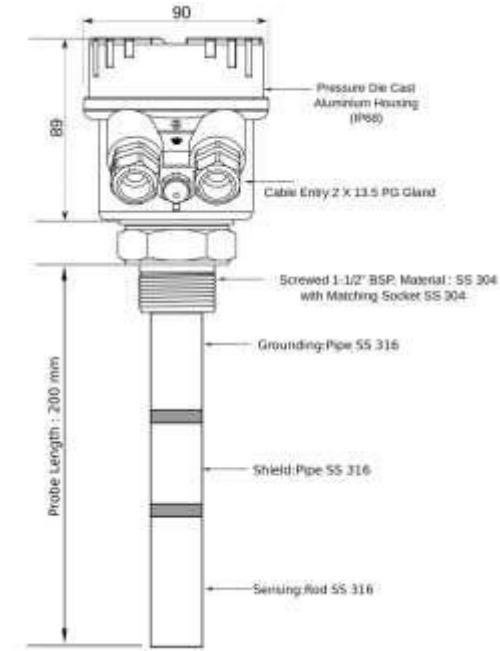

• GA Drawing

2. Commercial Advantage

- An obvious price benefit over competitor
- Reduced delivery in cycle time of receiving the product
- Better after sales support
- Strong Presence in the market
- Extended guarantee period


Vibrating Fork Type Level Switch: Vital

Working Principle :


A specially shaped tuning fork is kept vibrating using piezo-electric elements. The oscillations of the fork dampen when it comes in contact with the application material. The loss of oscillation amplitude is detected and used for switching the output. The output contacts of the relay are in turn used for annunciation and / or control.

Properties :

- Universal Power Supply: 18 - 55V DC & 90 - 265V AC
- Application Temperature Range : up to 200° C
- Outputs: DPDT Relay, Open Collector PNP Output
- Process Connection: Threads and Flanges
- Polished & hygienic fork
- Fast Switching: 0.5s & 0.8s options available
- Certifications: Flame Proof Housing IIC, IP-68 Housing

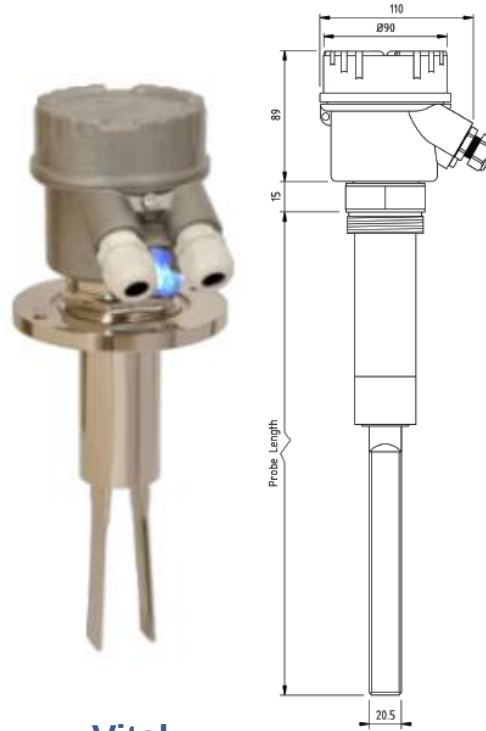

• **Vital**

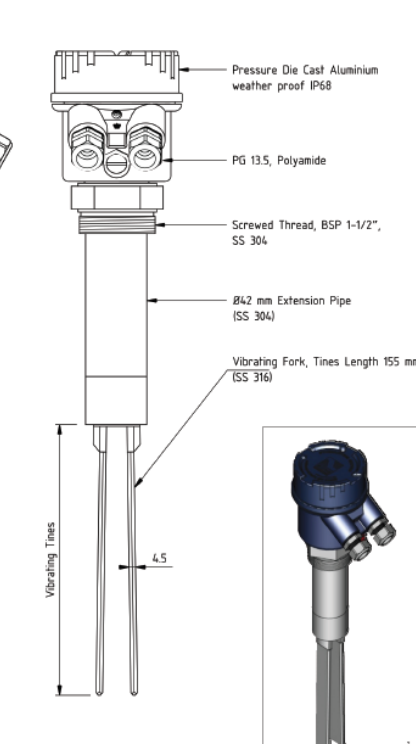

• **GA Drawing**

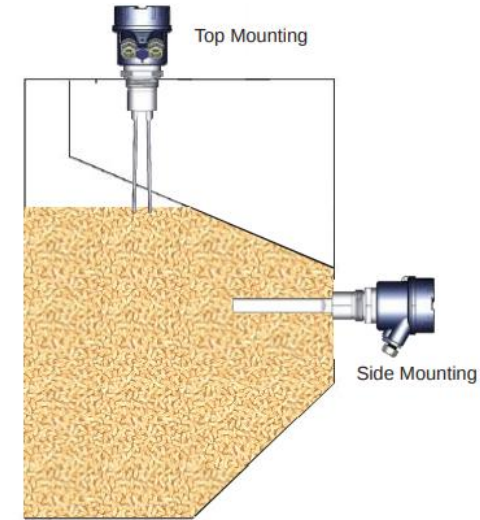


Figure 2: Mounting Arrangement for Vital

Features :

- Compact instrument, minimum tine length of 100 mm
- No moving parts, no wear and tear, maintenance free
- Comes with a fork erosion alarm
- IP68 Protection, as per IS13947
- Fast switching time < 0.85 seconds (available on request)
- Polished tines ideal for hygienic applications

Applications :

- PET / PVC chips with under water detection
- Rice, wheat, other food grains, flour
- Iron ore, sinters & pulverized coal
- Dry sand & fly-ash
- Packaging machines
- Milk Powder

Conductivity Type Level Switch: SLW

Working Principle :



A low AC voltage is applied between the probe electrode and the tank wall (or reference electrode in case of insulated tanks). When the liquid comes in contact with the electrode tip, a conductive path is established between the sense electrode and the tank wall / reference electrode. This current is sensed, amplified and made to operate a relay whose contacts in turn can be used for annunciation / control

Properties :

- Universal Power Supply: 18-55V DC and 90-265V at 50Hz AC
- Application Temperature Range : Up to 250° C
- Output Options: 1/2 SPDT Relay, Pump Control Logic
- Process connections: Screwed Thread & Flanges
- Available in Integral & Remote version
- Available in Rod & Rope Versions
- Certifications: Flame Proof IIA & IIB, IP65 & IP66 Housing
- Probe length: 65 mm to 5m

Applications

- Switch pumps off when tank is full, to avoid overflow
- Maintain a constant level to avoid material wastage
- Switch off pumps when running dry
- Identify empty tank to avoid wear tear, production stoppage

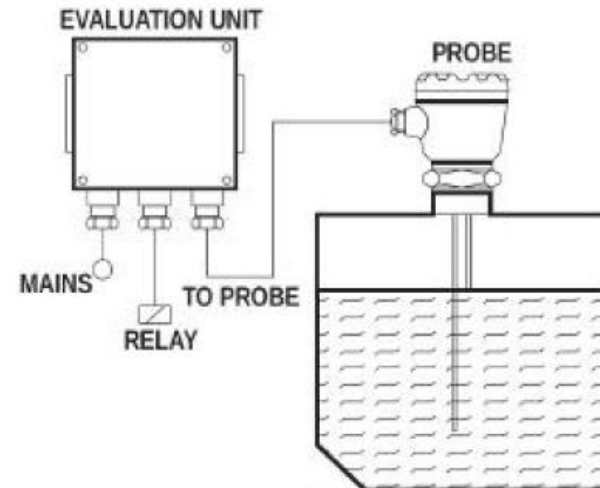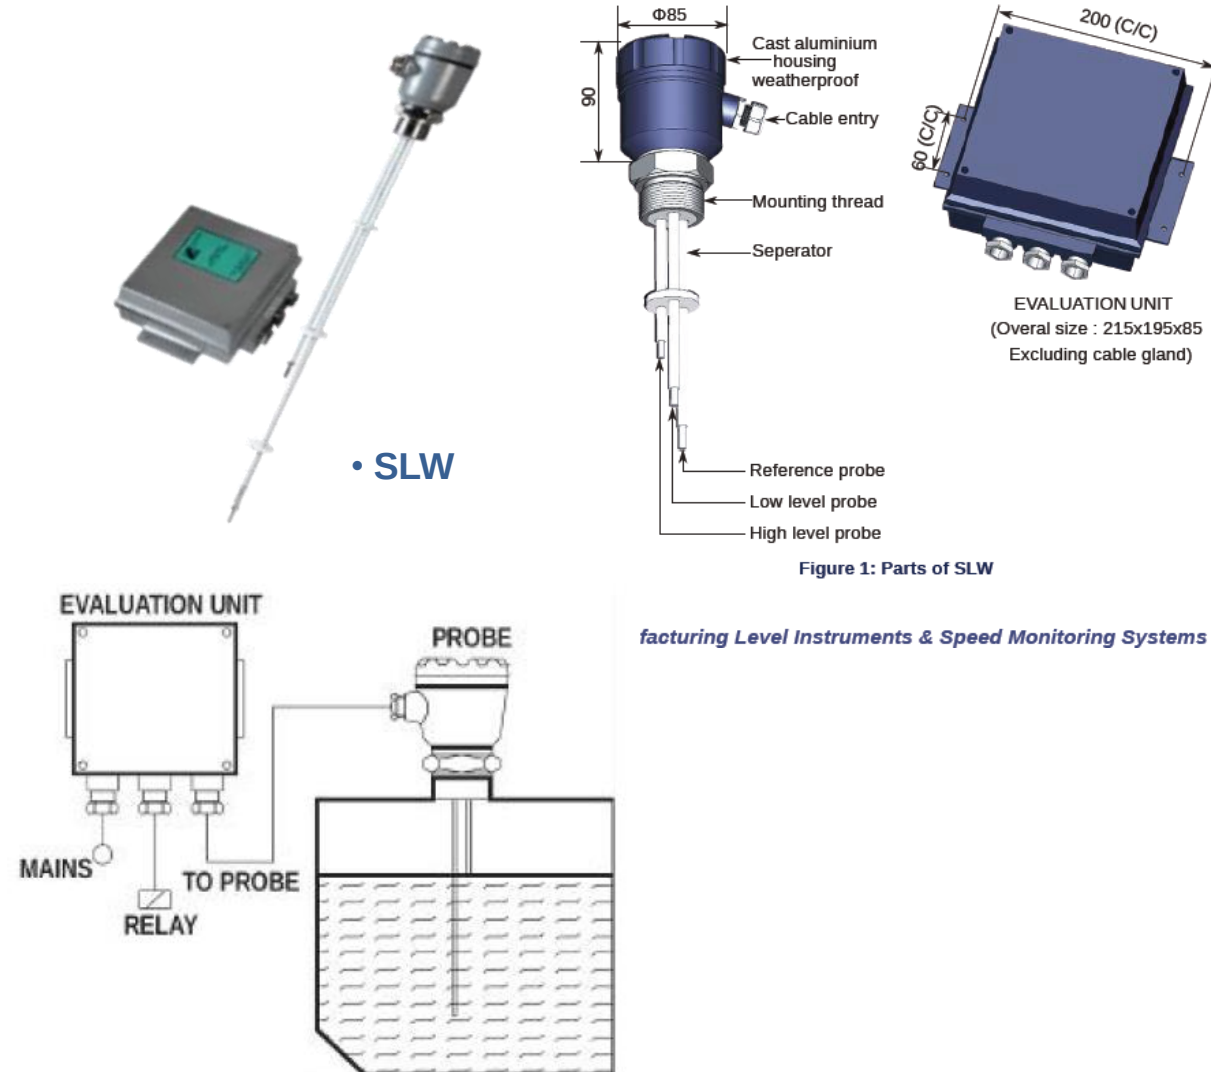

facturing Level Instruments & Speed Monitoring Systems

Rotating Paddle Type Level Switch: Orbit

Working Principle :

A paddle is rotated slowly by a stepper motor. An encoder coupled to the paddle shaft produces electrical pulses during its rotation. The pulses are monitored by a microprocessor to ascertain its movement. Paddle rotation stops when the material covers it. The microprocessor signals the material presence and sends the result in the form of potential free contacts. When the material uncovers the paddle's blades, the motor resumes free operation, which is detected by the microprocessor. Thereafter, the output status is changed and the motor starts rotating smoothly again waiting for the level to come.

Properties :

- Universal Power Supply: 90-265 V AC & 24-55 V DC
- Application Temperature Range : up to 200° C
- Outputs: DPDT Relay, SPDT Relay
- Rope probe available for longer lengths
- Adjustable RPM and adjustable switching sensitivity
- Foldable paddle mechanism for ease of installation
- 2 potential free contacts with adjustable time delay

Features :

- Direct stepper motor design, maintenance free
- Need for gear boxes and clutches eliminated
- Variable torque control, one paddle for all applications
- Selectable failsafe operation
- Foldable paddle mechanism for ease of installation
- Rope probe available for longer lengths

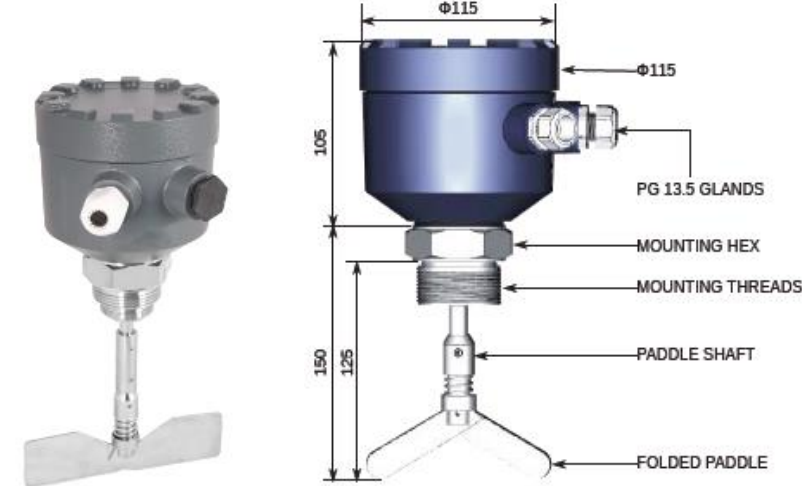


Figure 1: Parts of Orbit Paddle

- Orbit Paddle
- CAD Drawing

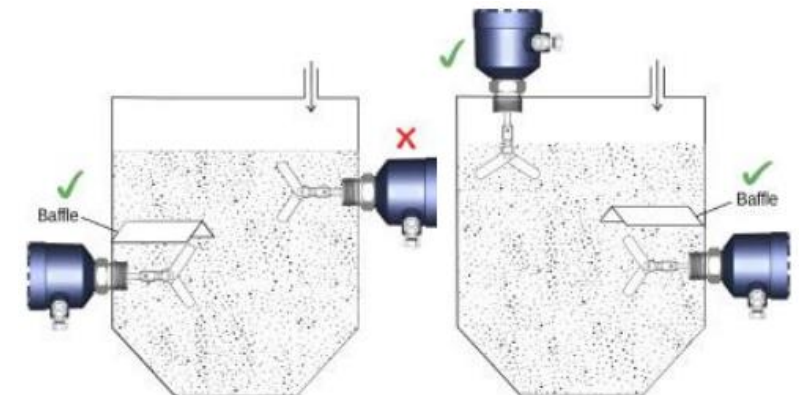


Figure 3: Correct Side Mounting

Capacitance Based Level Switch : SLC Series

Working Principle :

The probe comprises of a sense electrode, electrically isolated from the metallic tank by means of a suitable insulator. The sense electrode and the vessel wall serve as the two electrodes of a capacitor with the service material acting as the dielectric. A change in the level of material causes a change in the dielectric, which in turn causes the value of this tank capacitor to change.

- SLC



Properties :

- Universal Power Supply: 18-55 V DC & 90-265 V AC
- Application Temperature Range : Up to 350°C
- Outputs Options: 1/2 SPDT Relay & Pump Control Logic
- Available in Integral model
- Process Connection: Screwed & Flange
- Probe length: 100 mm to 10m
- Certifications: Flame Proof IIA & IIB Housing

Application:

This process includes grinding of material into finer pellets if inlet is solid and combining powder particles together by compressing to form granules. For solid applications, [SLC](#) will be helpful.

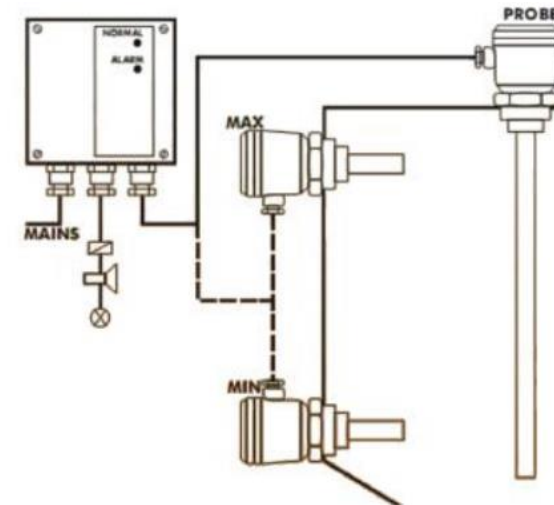


Figure 2: System Diagram

Our Instruments in Different Coating and Material For Special Application



Halar Coated (ECTFE)



PFA Coated



Buffed Finished

Many crucial advantages make coating with ECTFE /PFA so functional and effective:

- Very good weathering resistance: Practically no changes under the influence of weather
- Very good electrical properties: Low, stable dielectric constant over a broad range of temperatures and frequencies.
- Outstanding chemical resilience: Resistant to most technical acids, bases and solvents
- ECTFE coated tuning fork sensor extends the operating life under application media involving corrosive liquids

Our Products with Halar/ PFA Coatings used in Special Application:

- Glass Line HCL Reactors.
- Vessels in Chemical Reactions.
- Cylindrical and Around shaped tank shoring chemicals.
- Storage tanks other chemical like: Ethanol, Benzene, HCL etc.
- ❖ Elixir with halar coating is perfectly suitable for this type of application.
- ❖ EHEDG certified tuning fork level sensor Elixir-T Uni will be give justified solution for this type of application.
- ❖ level sensor SLC with full PTFE insulation will be fruitful for this type of application.



➤ OrbitLite Rotary Paddle Level Switch

➤ Highlights

- Light weight body
- Adjustable switching sensitivity
- AC synchronous motor design, maintenance-free
- Variable sensitivity control, wide application range
- Foldable paddle mechanism for ease of installation
- Transparent cover, easy visibility



Magnetic Level Switch in PP Float

➤ Highlights

- Mounting connection-Flange type
- Switch rating : 5 mA at 230 VAC
- Max. working temperature up to 250°C
- Specific gravity 0.8
- Out Put : 2 NO+ 2 NC



Float and Board Type Level Indicator

➤ Highlights

- Installation Available for Overhead , Ground Level and Underground level tank.
- Specific Gravity ≥ 0.8
- Temp range : Up to 100°C.
- Random Visible from long distance.
- Weatherproof Scale board (SS304 Pure polyester powder coated scale).



SAPSONIC : Ultrasonic level transmitter

➤ Highlights

- 2,4 Wire Compact.
- 2- Wire integrated level transmitter
- Temperature Compensation
- Fixed target suppression to avoid obstacles inside the tank
- Non-contact level measurement
- Maximum 25m (82ft.) measuring range
- Narrow (5°) beam angle
- Full temperature compensation
- communication.



SAP-Flow : Electromagnetic flow meter

➤ Highlights

- Universal power supply: 24 VDC 230VAC and battery operated.
- Application temperature range: up to 80°C
- Suitable for conductive liquid, its $>5\mu\text{S}/\text{CM}$
- PTFE, Neoprene, PFA, HDPE, Polyurethane, CPVC, Rubber
- Output: 4-20mA, Relay for alarm, Pulses
- Calibration with application material




Hydrostatic Pressure based level transmitter


➤ Highlights

- Latest RISC Core Micro-Controller Technology
- Measured Level is displayed continuously in terms of level, volume or mass
- Multipurpose 8 digit seven segment LED display for better resolution
- Two wire Analog Communication from Sensor to evolution unit support as much as 1 km distance between sensor and evolution unit

Our Annual Growth

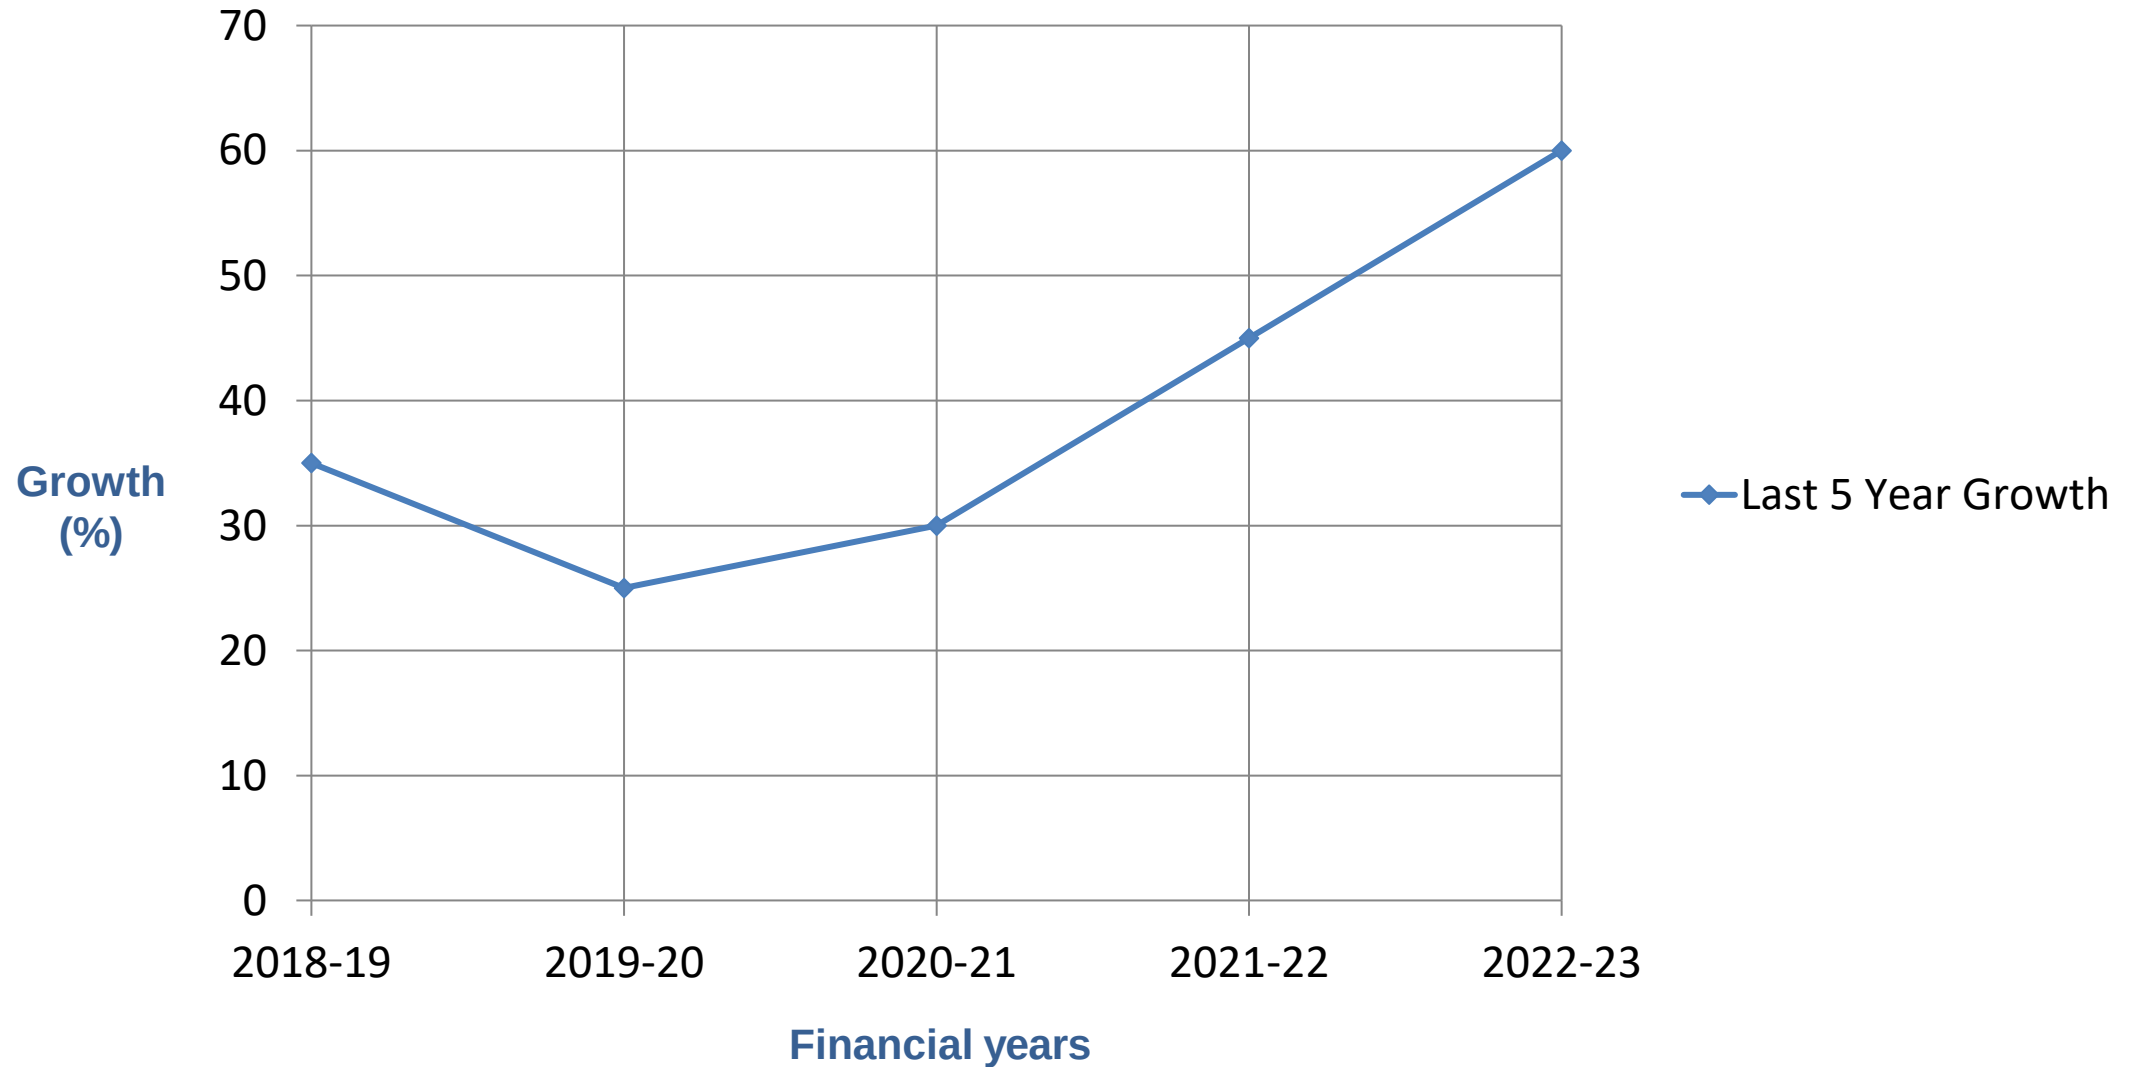

About us: Highlights Our Presence

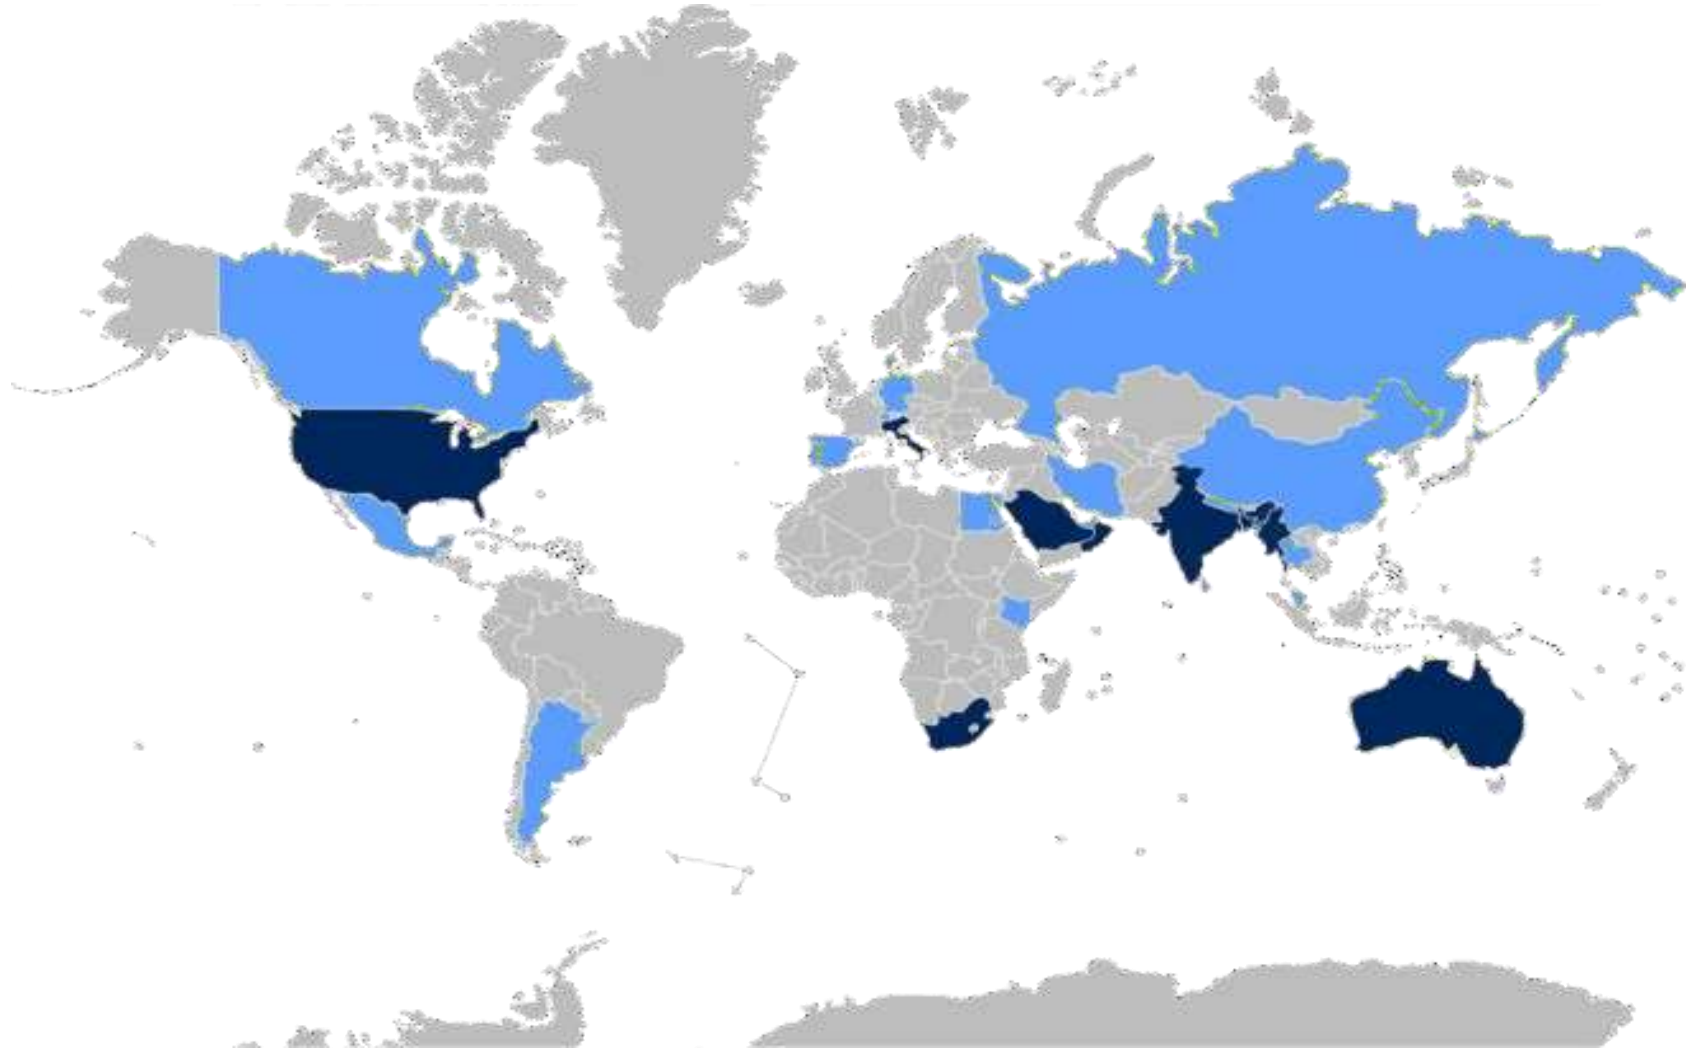

Our Manufacturing Process



PMI/XRF
handheld
machine
Ensuring
expected
composition



PMI TESTING

Mechanical Production



SEMI-AUTOMATIC TIG WELDING

Electrical Production



IPC(Institute for Printed) Members ,India Chapter
Standard PCB Manufacturers
Circuit Systems India, Gandhinagar
DMS Tech, Mysore

Other Manufacturing Equipments

- Insulation tester
- Hydraulic and Pneumatic Pressure testing
- Pneumatic Vice for faster assembly
- Battery operated Screw Drivers and Nut Tightener's

Our Team

CUSTOMER SUPPORT TEAM



RESEARCH & DEVELOPMENT TEAM



BUSSINESS DEVELOPMENT TEAM



ELECTRONICS MANUFACTURING TEAM



Knowledge up-skilling

- Regular Visits to Tech Expos
- IPC Membership
- ISA Maharashtra Members
- IMA (Indore Management Association)
- EO(Entrepreneur Organization)

Capacitance Based Level Switch : SLC Series

New facility 60,000 sqft

Sanver Road, Indore



- **Market Penetration**
- **Strong Know-how/Credentials**
- **Dedicated service support**
- **Team**
- **Customized products**
- **Customized delivery**
- **Cost for 'Brain' only**
- **Competitive rates**



THANK YOU



GET IN TOUCH:

www.sapconinstruments.com/cement

+91-731-4757575

131 Palshikar Colony, Indore

Present Today:

Ashwin Palshikar, Director - Business Development